


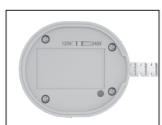

Made in China
Fabriqué en Chine

GSC24E - GSC24BLE - GSC24PKE
- V19a



Points de collecte sur www.quefairemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

BABYLIS SARL
Zl du Val de Calvigny
59141 Iwuy
France

www.babyliss.com

FAC 2024/04

IB-

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

- This appliance should only be used as described within this instruction booklet. Please retain for reference.
- Do not use the appliance in the bathroom.
- Do not use the appliance near water contained in basins, bathtubs or other vessels.
- Do not immerse the appliance in water or other liquids.
- **IMPORTANT** Whilst emitting steam, this appliance may cause burns if used incorrectly. Care should be taken when using the appliance due to the emission of steam.
- Keep the fabric steamer and its cord out of reach of children less than 8 years of age when it is energised or cooling down.
- **IMPORTANT CAUTION - AVOID SCALDING YOUR SKIN WITH HOT STEAM.**
- Surfaces of this appliance may be hot when in use.
- Take care to avoid the hot surfaces of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- **IMPORTANT** Always unplug the appliance when not in use and before filling the water tank or cleaning the appliance.
- Take care when refilling the water tank. Ensure the steamer is switched off and unplugged from the mains whilst refilling.
- This appliance should not be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Do not use if the appliance or supply cord are damaged. In the event of damage, discontinue use immediately and contact the Customer Care Line in order to avoid a hazard.
- In the event of a fault, discontinue use immediately and contact the Customer Care Line.
- Do not leave the appliance unattended when switched on or plugged in.
- Do not place the appliance or nozzle on any heat sensitive surface whilst in operation.
- Do not use any other attachments than those supplied with the product.
- This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
- Care should be taken when using the appliance due to emission of steam.
- Children should always be supervised to ensure that they do not play with this product.
- Keep out of the reach of children.
- Allow the appliance to cool before storing away.
- Always empty the water tank before storage
- After use, do not coil the lead around the appliance as this may cause damage. Instead coil loosely by the side of the appliance.
- This product complies fully with all appropriate EU and UK Legislation and the Standards relevant to this type and class of appliance. We are an ISO9001:2015 certified company that continually evaluates our Quality Management System performance. If you have any query regarding product safety and compliance, please contact the Customer Care Line.


 



IMPORTANT FOR HOUSEHOLD USE ONLY FILLING INSTRUCTIONS

1. Make sure the unit is unplugged.
2. Stand the unit on a table and grasp with one hand.
3. Pull the water reservoir out, away from the steamer body.
4. The rubber inlet cover is located on the top of

the water reservoir.

5. Open the inlet cover and fill the reservoir with water. We recommend that you use only distilled water (available at grocery stores), as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.
6. Close the inlet cover and return the reservoir to its proper position, making sure that it snaps in place and is secure.

OPERATING INSTRUCTIONS

1. Fill water reservoir with water (distilled water is recommended). See directions at left.
2. Confirm the voltage available at each location before using the appliance. Check that the dual voltage switch on bottom of unit is in the correct position for the voltage available. For use in several other countries, the voltage selector switch may need to be slid to the 240 volt position. An adapter plug may be necessary when using this appliance in some foreign countries. If so, plug the steamer into correct adapter plug for your location and plug assembly into electrical outlet.
3. Point the steamer head away from you and anyone else in the room. Press the  button. The  button should light up red and then turn green when steam is ready (within approximately 35 seconds). The garment steamer is now ready to use. Press the  button to release a continuous flow of steam from the steam head.
4. Hold steamer by its handle while steaming garments or while unit is hot.
5. Direct the flow of steam toward garment to remove wrinkles.
6. To stop the flow of steam, press the  button again.
7. Press the round Steam Head Adjustment Button on the hinge to unlock the steam head for angle adjustment.
8. Press the  Button to turn off.
9. Unplug the device when it is not in use.

STEAMING TIPS

1. Hang your garment or fabric.
NOTE: Avoid using metal clothes hangers, if possible.
2. Pass the steam jets about an inch above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.
3. **CAUTION:** When hanging garment on a door while steaming, be careful not to damage the door with steam.
4. First test unit on an inconspicuous area of the item to be steamed, to ensure fabric can tolerate the effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.
5. When steaming, always keep the unit in motion and about one inch from the surface of the item being steamed to avoid potential damage. Do not continuously hold steamer over an area or let steamer jets directly touch the fabric, as this as this can cause damage, including shrinkage, melting, or color shift on certain types of material.
6. In the case of heavier, durable fabrics, such as wool coats or bedding, slower passes with the steamer may be necessary to achieve desired results.
7. After use, unplug steamer and empty any remaining water from the tank to avoid leakage.

KILLS 99.9% OF BACTERIA*

1. Position the garment steamer's nozzle at a minimum distance of 0.5 inch (1.3 cm) from material to be treated.
2. Remain steaming in this position for 2 minutes, then move to the next area to be treated and repeat.

* Bacteria reduction rate was measured after exposing the tested samples to steam for 2 minutes at a ½-inch distance from the garment steamer head. Testing was performed on E. coli.

DEUTSCH

GSC24E - GSC24BLE - GSC24PKE

NEDERLANDS

GSC24E - GSC24BLE - GSC24PKE

ITALIANO

GSC24E - GSC24BLE - GSC24PKE

ESPAÑOL

GSC24E - GSC24BLE - GSC24PKE

PORTUGUÊS

GSC24E - GSC24BLE - GSC24PKE

DANSK

GSC24E - GSC24BLE - GSC24PKE

SVENSKA

GSC24E - GSC24BLE - GSC24PKE

NORSK

GSC24E - GSC24BLE - GSC24PKE

SUOMI

GSC24E - GSC24BLE - GSC24PKE

ΕΛΛΗΝΙΚΑ

GSC24E - GSC24BLE - GSC24PKE

MAGYAR

GSC24E - GSC24BLE - GSC24PKE

POLSKI

GSC24E - GSC24BLE - GSC24PKE

ČESKY

GSC24E - GSC24BLE - GSC24PKE

РУССКИЙ

GSC24E - GSC24BLE - GSC24PKE



Электрический прибор для укладки волос
Производитель: Бэбилис (ARL)
Промышленная зона Валь-дэ-Кальвини
59141 Иви
Франция
Сделано в Китае
Дата производства (неделя, год): см. на товаре

