

Don't worry be
uppy®

Your smart secret 😊



MANUALE D'USO

Benvenuto

Grazie per aver scelto UPPY®, l'innovativo sistema da parete per asciugare e profumare la biancheria in modo discreto, silenzioso ed ecologico. UPPY® unisce design, funzionalità e sostenibilità, pensato per migliorare il comfort in casa senza rinunciare allo stile.

Contenuto della confezione

- 1 UPPY® con ventole integrate
- 1 pannello frontale decorativo in forex
- 1 dima cartacea per il fissaggio a parete
- 3 tasselli con viti 8 x 65 mm
- 3 copriviti in materiale plastico
- 1 capsula profumata per bucato
- 3 grucce appendiabiti con pinze regolabili, dimensioni: 29 x 3 x 8 cm

Avvertenze di sicurezza

- Installare esclusivamente su pareti in muratura piena o forata.
Non utilizzare su cartongesso o pareti non portanti;
- Non superare i **20kg** di carico totale, inclusi bucato e grucce;
- I capi non devono toccarsi tra loro: l'aria circolante accelera l'asciugatura;
- Distribuire uniformemente il bucato lungo l'asta. Evitare concentrazioni di peso sulle estensioni laterali;
- Tenere lontano da fonti di calore e umidità eccessiva;
- Non utilizzare il prodotto in modalità differenti da quelle indicate nel presente manuale in quanto può compromettersi il corretto funzionamento del prodotto;
- Non installare sopra apparecchi elettrici o elettronici;
- Evitare di posizionare UPPY in modo che possa gocciolare su prese elettriche.

- Non utilizzare Fischer diversi da quelli contenuti nella confezione;
- Non utilizzare capsule di profumo differenti da quelle fornite;
- Non appendersi alle aste;
- Non collegare il prodotto ad alimentazioni diverse da quelle indicate in etichetta e nel presente manuale d'uso;
- Non installare il prodotto all'esterno;
- Quando aperto non appoggiare carichi sul pannello;
- Non bagnare il prodotto – pulire solo con panno umido;
- Distribuire le grucce omogeneamente lungo le aste;
- Powerbank e cavo USB-C non inclusi;
- Utilizzare SOLO componenti elettrici/elettronici marcati CE;
- Non ingerire le capsule di profumo;
- Le capsule di profumo non sono necessarie al corretto funzionamento del prodotto, sono esclusivamente un'opzione;
- Non utilizzare sotto i 14 anni.

Installazione

Materiale fornito:

 
- Dima cartacea per il corretto posizionamento
- 3 Tasselli con vite 8 x 65 mm
- 3 copriviti in materiale plastico

Strumenti necessari:

- Trapano con punta Ø8 mm
- Cacciavite o avvitatore
- Livella a bolla


Procedura:

- 1** Posizionare la dima cartacea alla parete a un'altezza consigliata **tra 1,65 e 1,85 da terra** (ideale anche per capi lunghi come lenzuola, tende, tovaglie).

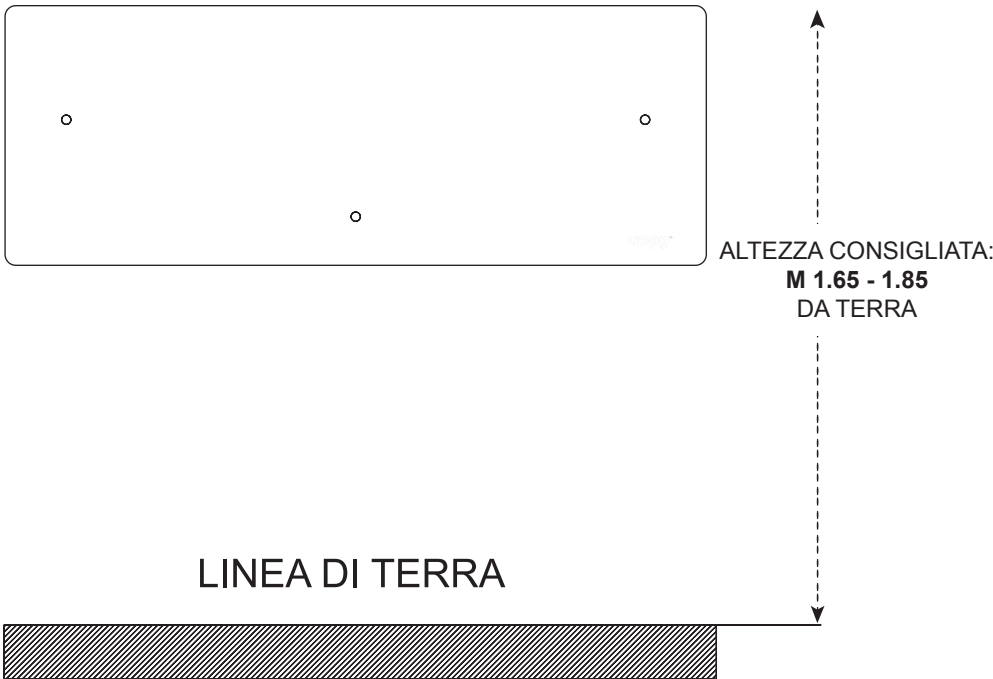


Installazione

 
- 2** Forare nei tre punti segnati nella dima (triangolo rovesciato). Utilizzare la livella a bolla se necessario.

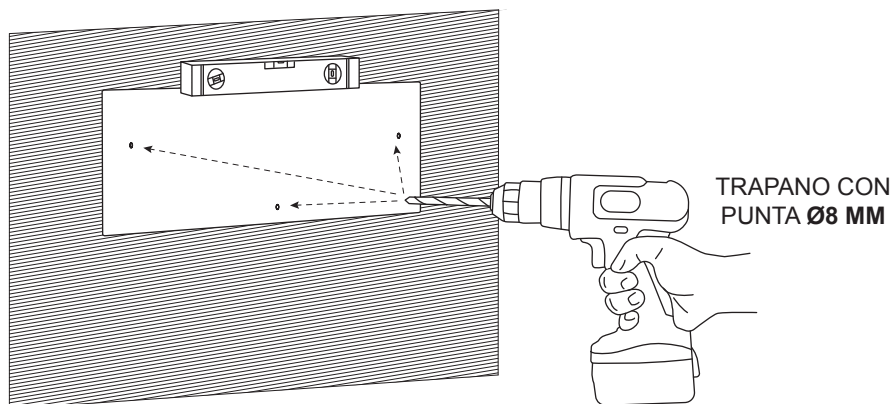

 - 3** Togliere la dima e inserire i tre tasselli con viti nei tre fori.

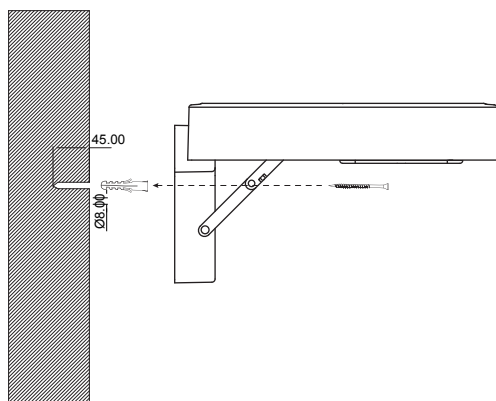

 - 4** Fissare UPPY® con le viti usando cacciavite o avvitatore e apporre a pressione i copriviti in dotazione sulle viti.

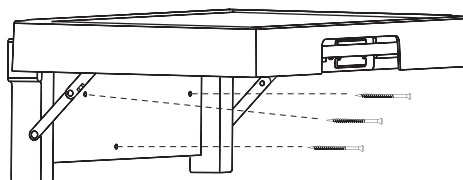


Attenzione: non montare su cartongesso senza staffe

Utilizzo quotidiano

Apertura del pannello:

 
Inserire la mano nell'apposito incavo frontale e sollevare verso l'alto fino a 90°.

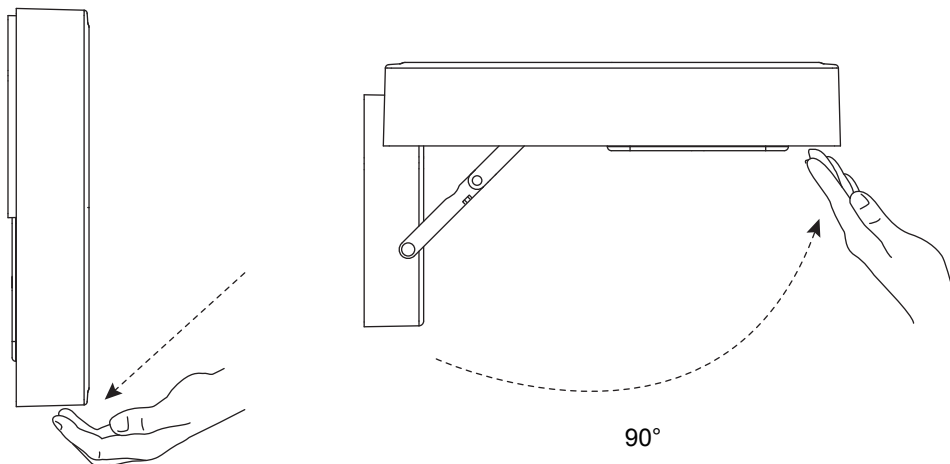

Blocco delle cerniere:


Una volta aperto, bloccare le cerniere laterali in acciaio inox spingendo verso l'alto le cerniere a incastro. Per sbloccare, sollevare leggermente il pannello sopra i 90° e spingere le cerniere verso il basso dallo snodo centrale.

 APERTURA

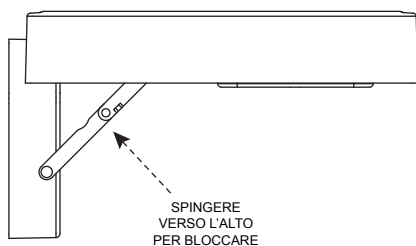

CHIUSURA

 
SPINGERE VERSO IL BASSO PER SBLOCCARE

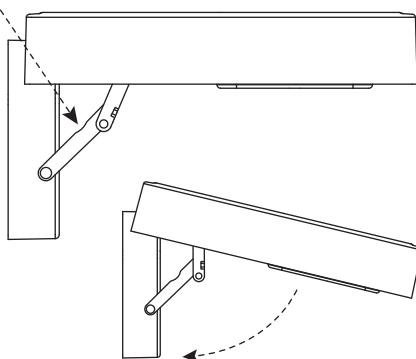

Utilizzo quotidiano

Estensione aste telescopiche:

 Estrarre lateralmente le aste telescopiche. La capacità indicativa di carico lungo tutta l'asta (comprese le estensioni) è di **15 grucce**, fornite da Sciuga Srl e incluse nella confezione.

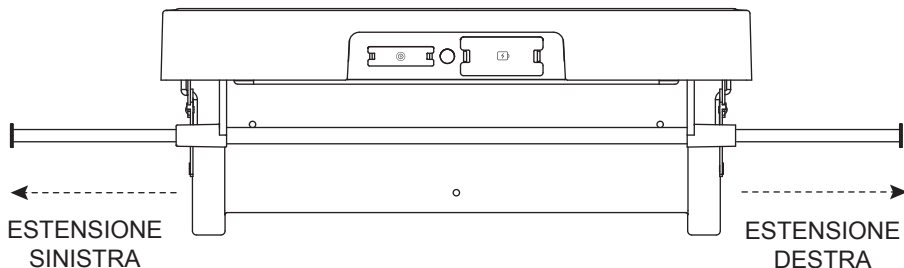


Le aste scorrono per strisciamento e terminano con un tappo interno a pressione che funge da battuta. Non forzare oltre il limite per evitare che escano dalla sede e creino danni al meccanismo.


Accensione ventole:

1A

 Inserire un **powerbank (non incluso)** nell'apposito vano e collegarlo al cavo presente all'interno del cassetto. Verificare che i parametri di alimentazione del powerbank coincidano con quelli in etichetta.

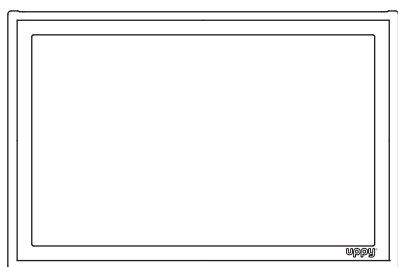

VANO POWERBANK

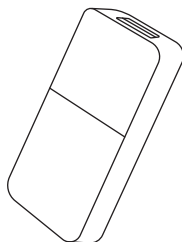 

**POWERBANK 5V e
MAX 1A USB**

Dimensioni massime:

altezza 2,5cm

larghezza 6cm

 
lunghezza 9 cm

Utilizzo quotidiano

1B


IN ALTERNATIVA

Collegare UPPY® alla corrente con alimentazione 5V e max 1A, utilizzare per il collegamento un **cavo USB-C (non incluso)** inserendo l'estremità type C nell'ingresso tondo collocato sul retro di UPPY® e collegare l'estremità USB alla corrente con alimentatore. Verificare che i parametri di alimentazione coincidano con quelli in etichetta.

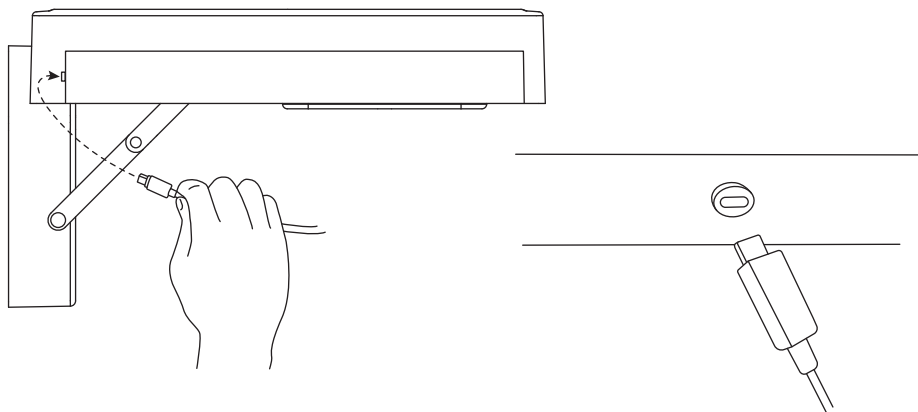

3

 
Premere il **pulsante on/off** per avviare o arrestare le ventole.

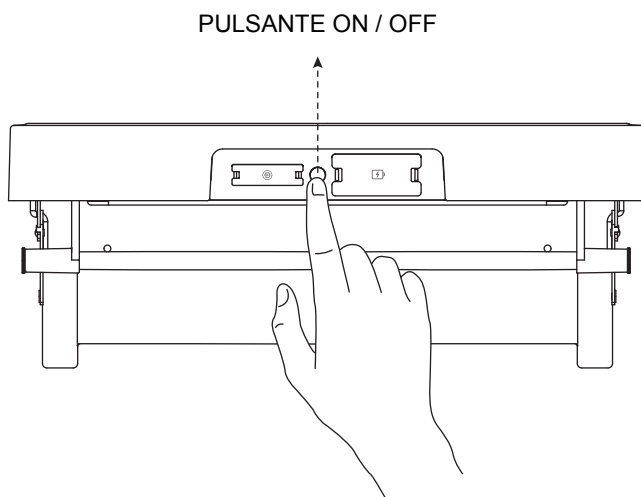

Utilizzo quotidiano

Alloggiamenti:

 La capsula profumata (opzionale) e il powerbank vanno inseriti nei rispettivi vani frontali a cassetto, estraibili manualmente mediante pinzatura laterale.


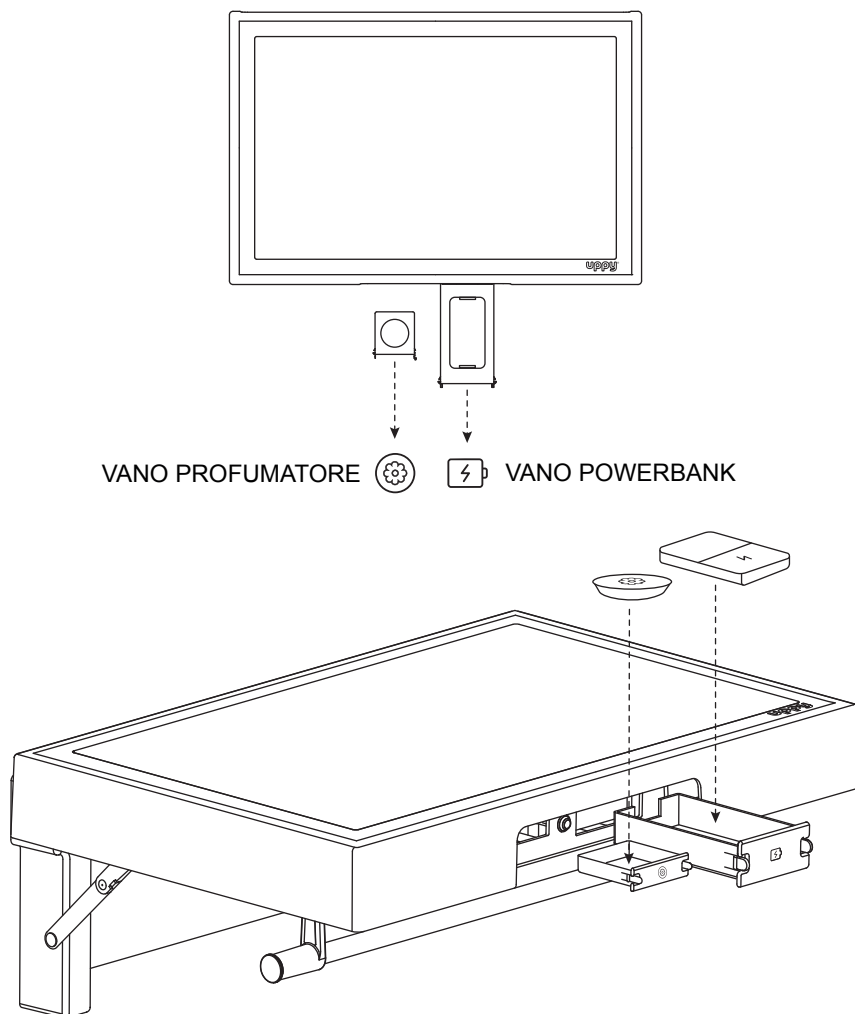


Chiudere sempre i cassetti fino a percepire il click di chiusura prima di richiudere UPPY, per evitare che cadano verso il basso.

Utilizzo quotidiano

Disposizione grucce:

  Distribuire il bucato in modo uniforme lungo tutta l'asta e mantenere i capi distanziati, così da favorire il passaggio dell'aria.

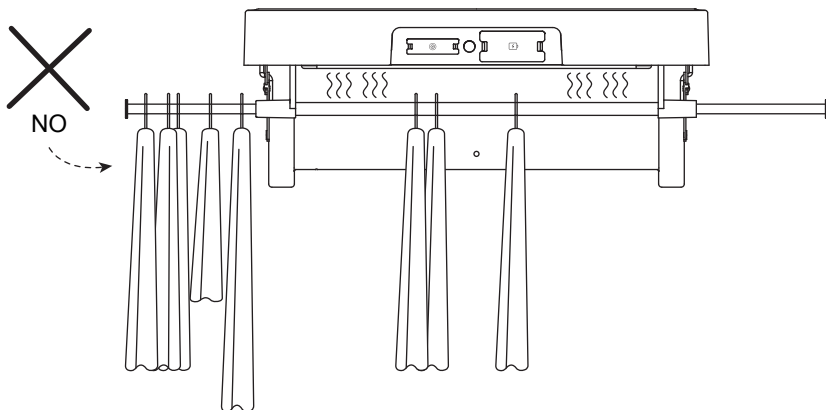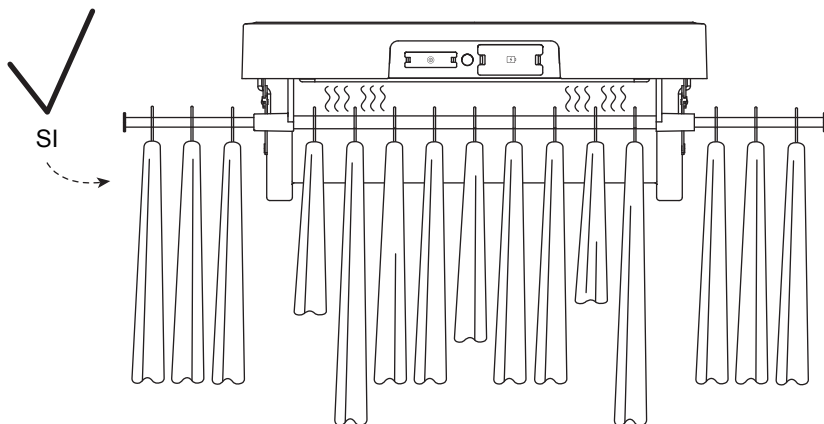

L'inserimento del profumatore è opzionale

 
e non impatta sul funzionamento delle ventole.

Non usare capsule di profumo diverse da quelle fornite da Sciuga Srl su uppyhouse.com.


Personalizzazione

sostituzione cornice e pannello in forex


- 1** Aprire Uppy, bloccare le cerniere, svitare le viti inferiori e sollevare la cornice per rimuoverla.

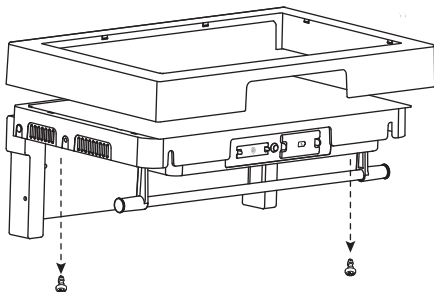

 
- 2** Controllare che il pannello in forex sia rimasto fissato alla cornice; in caso contrario, staccarlo delicatamente dal pannello frontale.

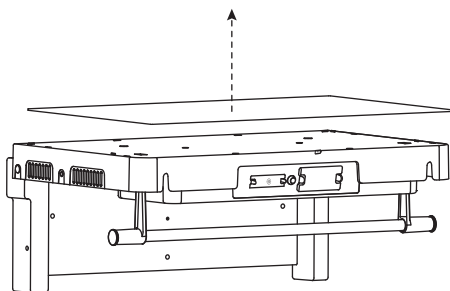

 - 3** Posizionare il nuovo pannello in forex sulle battute della cornice, appoggiare cornice e pannello sul frontale di Uppy e inserire le viti negli alloggi.

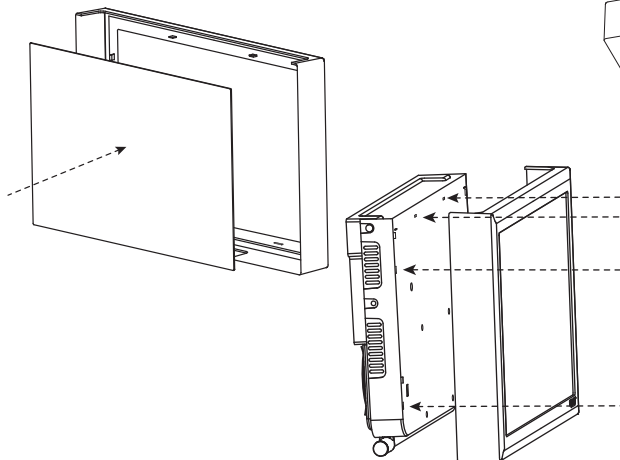

 - 4** Stringere delicatamente le viti dal basso fino a fissare cornice e pannello.

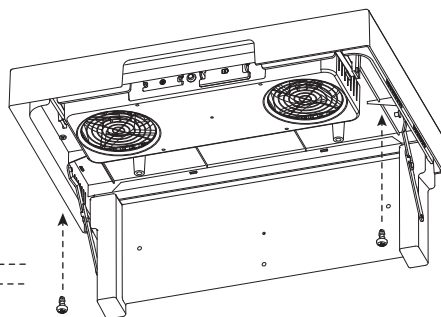

Il pannello decorativo in forex può essere scelto tra i modelli disponibili su uppyhouse.com oppure personalizzato caricando un'immagine a piacere. Modalità e costi sul sito.

Manutenzione e pulizia

Controllare periodicamente la stabilità del fissaggio a parete e lo stato di pulizia delle ventole.
Per la manutenzione e la pulizia, seguire le indicazioni riportate nella tabella seguente:

COMPONENTE	STRUMENTO CONSIGLIATO	UPPY	AVVERTENZE
Cornice	Panno morbido leggermente inumidito con sola acqua	Chiuso	Non usare detergenti, solventi o abrasivi
Pannello decorativo in forex	Panno morbido leggermente inumidito con sola acqua	Chiuso	Non usare detergenti, solventi o abrasivi
Cassetti frontali (powerbank e profumatore)	Panno morbido, pulire separatamente dopo averli estratti	Chiuso	Non usare detergenti, solventi o abrasivi
Aste telescopiche in acciaio inox	Panno morbido umido, anche con prodotti specifici per acciaio inox	Aperto	Dopo la pulizia, asciugare per evitare aloni
Pannello fissato a parete	Panno morbido leggermente inumidito con sola acqua	Aperto	Non usare detergenti, solventi o abrasivi
Ventole interne	Aria compressa o pennello morbido	Aperto	Non usare detergenti, solventi o abrasivi. Non smontare né aprire il prodotto

Dati tecnici

- **Dimensioni:** 57 cm x 38 cm x 7 cm
- **Peso:** 3,5 kg
- **Materiali:** ABS, acciaio inox, forex
- **Alimentazione:** Powerbank 5V e max 1 A - USB-C (non incluso)
- **Classe di isolamento:** III
- **Consumo:** 0.03 kWh per 8h
- **Rumorosità:** 38 dBA a 1 m
- **Carico massimo:** 20 kg totali
- **Supporto:** fino a 15 grucce

In caso di problemi

- **Non smontare in nessun caso l'apparecchio da soli.**

Un apparecchio mal riparato può comportare dei rischi per l'utilizzatore.

- **Non utilizzare l'apparecchio e contattare l'assistenza se:**

- l'apparecchio è visibilmente danneggiato;
- l'apparecchio emette un rumore metallico;
- l'apparecchio non si avvia quando viene premuto il pulsante.

Conformità legislativa

UPPY® è un prodotto marcato  ai sensi della direttiva EMC.

(Direttiva Europea 2014/30/UE) e conforme al Regolamento 2023/988.

Smaltimento

UPPY® è un apparecchio elettrico e deve essere smaltito in conformità alla direttiva RAEE (2012/19/UE).

Smaltire presso centri autorizzati.

Profumatore: Una volta esaurito il liquido, le capsule profumate vanno smaltite nell'INDIFFERENZIATO.

Sulla confezione è indicato come smaltire l'imballaggio.



Garanzia

Garanzia legale:

2 anni per difetti di fabbricazione.

Non copre danni da uso improprio, usura o installazione errata.

Assistenza clienti e reclami:



Email: assistenza@uppyhouse.com

www.uppyhouse.com

Welcome

Thank you for choosing UPPY®, the innovative wall-mounted system designed to dry and freshen your laundry in a discreet, quiet, and eco-friendly way. UPPY® combines design, functionality, and sustainability, with the goal of enhancing comfort at home without compromising on style.

Package contents

- 1 UPPY® unit with integrated fans
- 1 decorative front panel in Forex
- 1 paper template for wall mounting
- 3 plugs with screw 8 x 65 mm
- 3 plastic screw covers
- 1 scented capsule for laundry
- 3 clothes hangers with adjustable clips, size: 29 x 3 x 8 cm

Safety warnings

- Install only on solid or hollow masonry walls.
Do not use on drywall or non-load-bearing walls.
- Do not exceed a total load of **20 kg**, including laundry and hangers.
- Clothes should not touch each other: circulating air accelerates drying.
- Distribute the laundry evenly along the rod. Avoid weight concentration on the side extensions.
- Keep away from heat sources and excessive humidity.
- Do not use the product in ways other than those indicated in this manual, as this may compromise its proper functioning.
- Do not install above electrical or electronic devices.
- Avoid positioning UPPY in a way that may cause dripping onto electrical outlets.

Don't worry be **uppy**®

- Do not use wall plugs other than those supplied in the package;
- Do not use fragrance capsules other than the ones provided;
- Do not hang from the rods;
- Do not connect the product to power sources other than those indicated on the label and in this manual;
- Do not install the product outdoors;
- When open, do not place loads on the panel;
- Do not wet the product – clean only with a damp cloth;
- Distribute the hangers evenly along the rods;
- Power bank and USB-C cable not included;
- Use ONLY CE-marked electrical/electronic components;
- Do not ingest the fragrance capsules;
- The fragrance capsules are not required for the proper functioning of the product; they are optional only;
- Not to be used by children under 14 years of age.

Installation

Supplied materials:

 
- Paper template for correct positioning
- 3 plugs with screw 8 x 65 mm
- 3 plastic screw covers

Necessary tools:

- Electric drill with **Ø8 mm** bit
- Screwdriver or power driver
- Spirit level


Mounting procedure:

- 1** Position the paper template on the wall at a recommended height between **1.65 m and 1.75 m from the floor** (suitable also for long items such as sheets, curtains, and tablecloths).

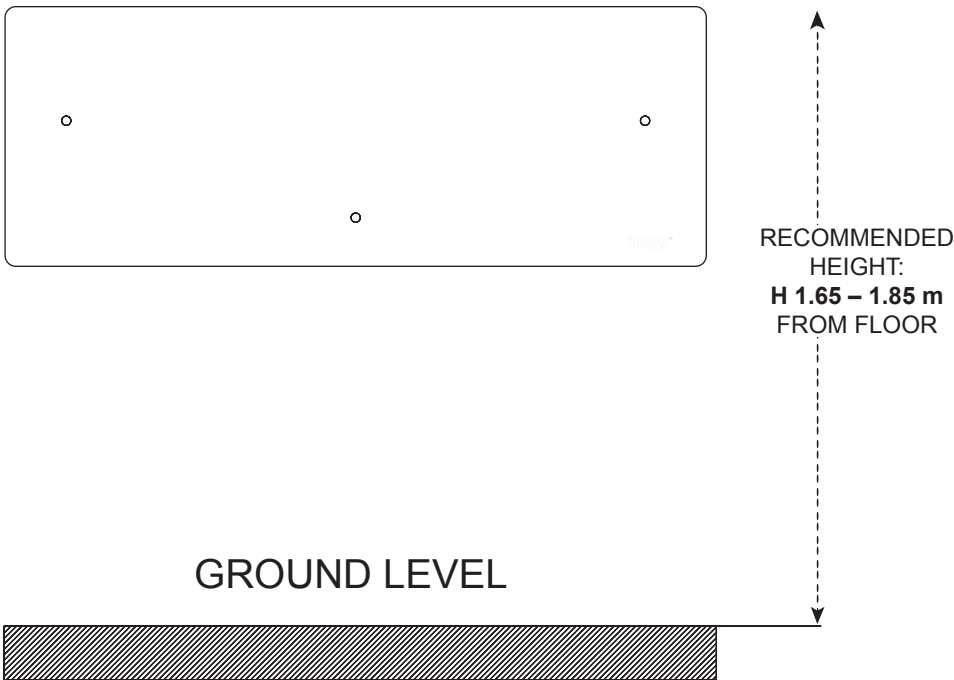


Installation

 
- 2** Drill at the three points marked on the template (in an inverted triangle). Use the spirit level if necessary.

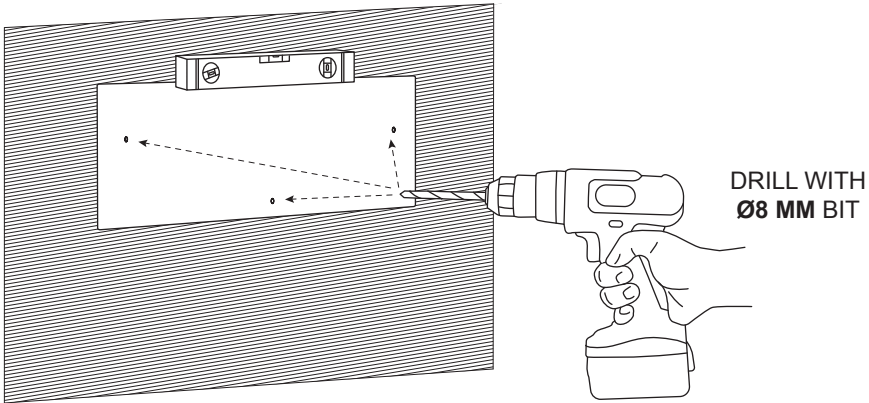

 - 3** Remove the template and insert the three Fischer wall plugs into the holes.

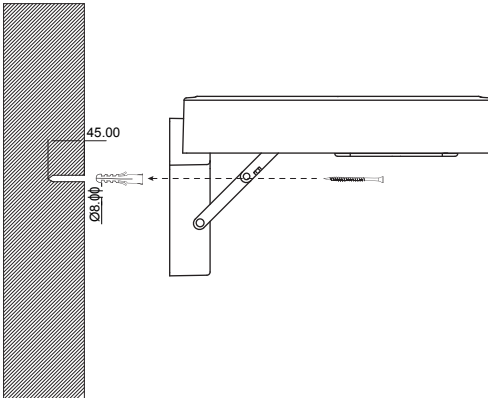

 - 4** Fix UPPY® to the wall with the screws using a screwdriver or power driver, then press the supplied screw covers onto the screws.

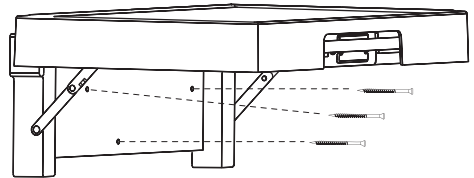


Warning: do not mount on drywall without brackets.

Daily use


Opening the panel:

 Insert your hand into the designated front recess and lift upwards to 90°.

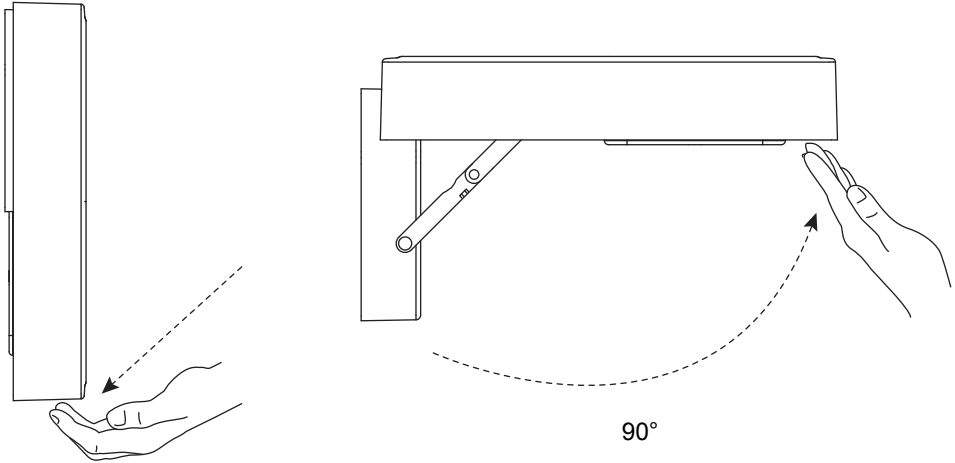

Hinge locking:

 
Once opened, lock the stainless-steel side hinges by pushing the snap hinges upward. To unlock, slightly lift the panel above 90° and push the hinges downward from the central joint.

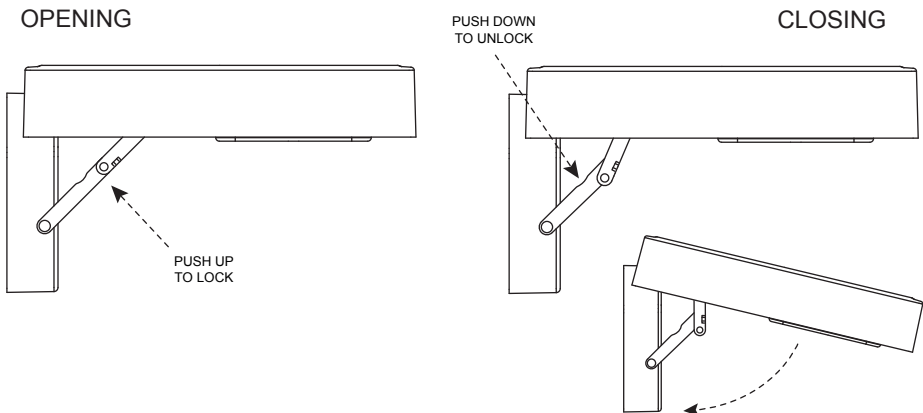

Daily use

Extension of telescopic rods:

 Pull out the rods sideways. The indicative load capacity along the entire rod (including the extensions) is **15 hangers**, supplied by Sciuga Srl and included in the package.


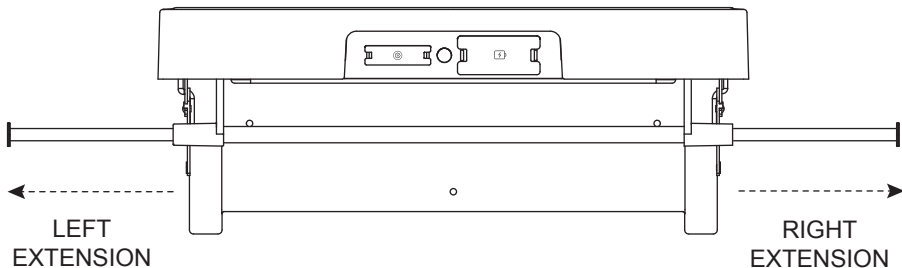


The rods slide by friction and end with an internal pressure cap that acts as a stop. Do not force them beyond the limit to prevent them from coming out of their housing and damaging the mechanism.

Activating the fans:



  Insert a **powerbank (not included)** into the designated compartment and connect it to the cable inside the drawer. Make sure that the power bank's supply parameters match those indicated on the label.

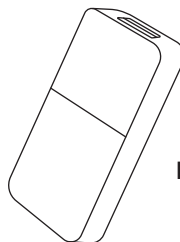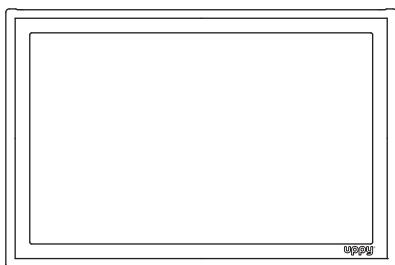

POWERBANK 5V,
MAX 1A USB

Maximum dimensions:

height 2.5 cm
width 6 cm
length 9 cm



 
POWERBANK COMPARTMENT

Daily use

1B


ALTERNATIVELY

Connect UPPY® to the power supply (5V, max 1A) using a **USB-C cable (not included)**. Insert the Type-C end into the round port located on the back of UPPY® and connect the USB end to the power source with an adapter. Make sure that the supply parameters match those indicated on the label.

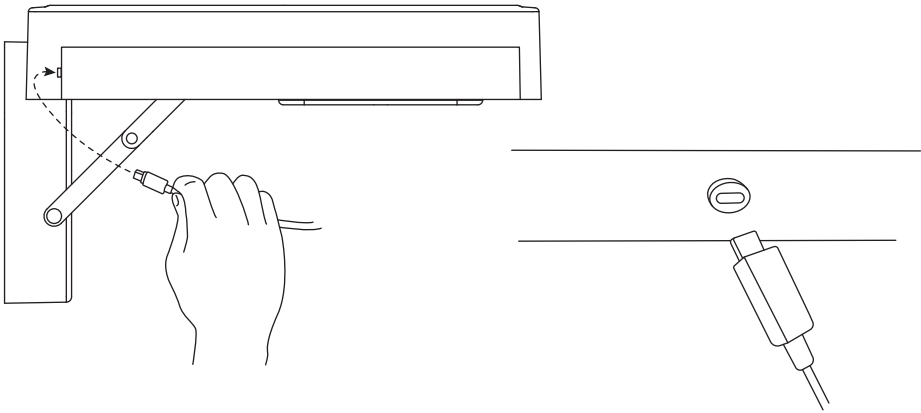

3

 
Press the **on/off button** to start or stop the fans.

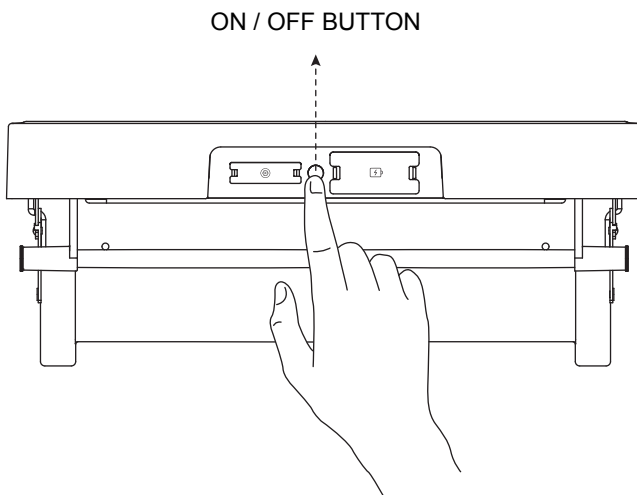

Daily use

Compartments:

 The fragrance capsule (optional) and the power bank must be inserted into their respective rear compartments (manual pull-out drawers with side clips).


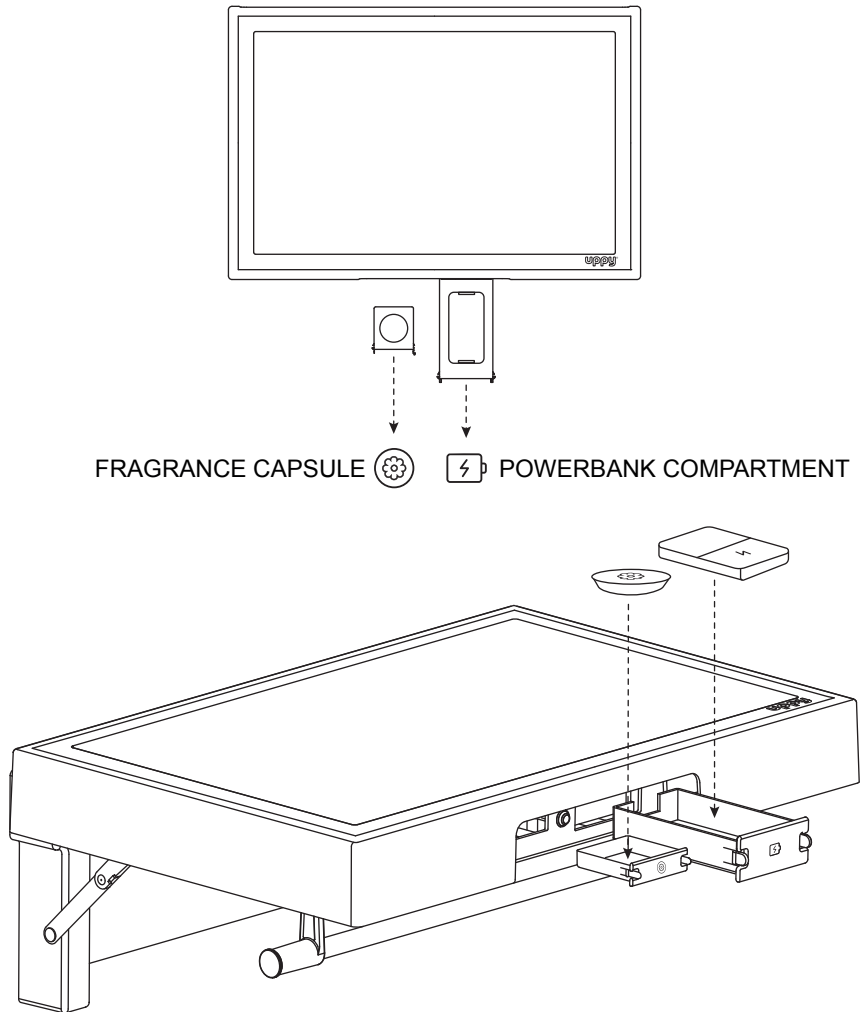


Always close the drawers until you hear the closing click before folding UPPY, to prevent them from falling down.

Daily use

Hanger arrangement:

  Distribute the laundry evenly along the entire rod and keep the garments spaced apart to allow air circulation.

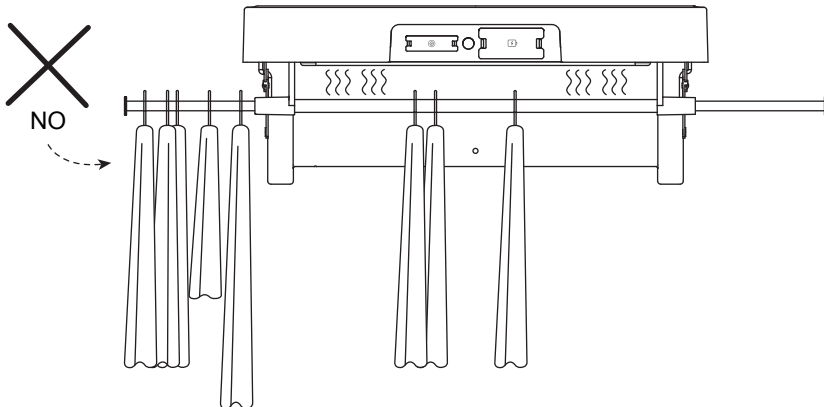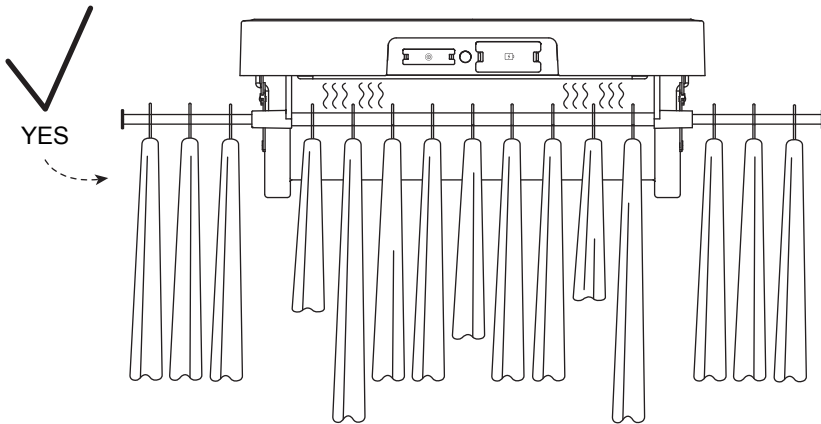

Inserting the fragrance capsule is optional

 
and does not affect the operation of the fans.

Do not use fragrance capsules other than the ones provided by Sciuga srl on uppyhouse.com.


Customization

replacing the frame and Forex panel


- 1** Open Uppy, lock the hinges, unscrew the lower screws, and lift the frame to remove it.

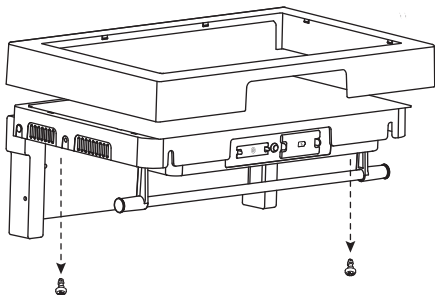

 
- 2** Check that the forex panel is still attached to the frame; if not, gently detach it from the front panel.

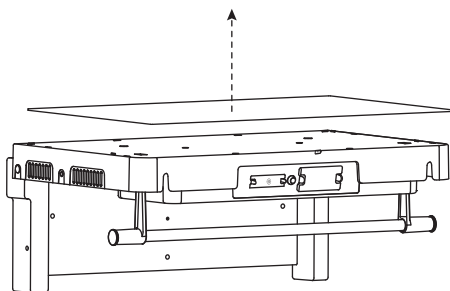

 - 3** Place the new forex panel on the frame stops, rest the frame and panel on Uppy's front, and insert the screws into their housings.

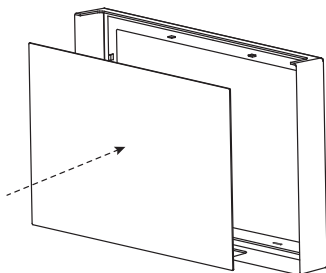

 - 4** Gently tighten the screws from below until the frame and panel are secured.

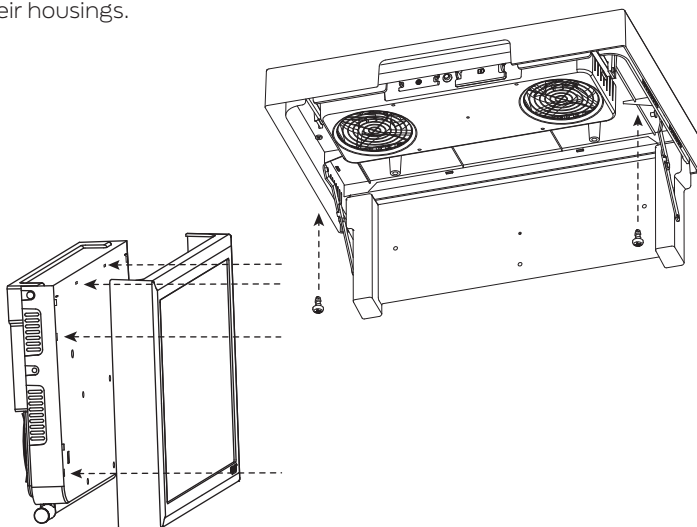

The decorative forex panel can be chosen from the available models on uppyhouse.com or customized by uploading an image of your choice. Options and costs are available on the website.

Maintenance and cleaning

Periodically check the stability of the wall mounting and the cleanliness of the fans.

For maintenance and cleaning, follow the instructions provided in the table below:

COMPONENT	RECOMMENDED TOOL	UPPY	AVVERTENZE
Frame	Soft cloth slightly moistened with water only	Close	Do not use detergents, solvents, or abrasives
Decorative front panel (Forex)	Soft cloth slightly moistened with water only	Close	Do not use detergents, solvents, or abrasives
Drawers (internal compartments for powebank and fragrance capsule)	Soft cloth, clean separately after removing them	Close	Do not use detergents, solvents, or abrasives
Stainless steel telescopic rods	Soft damp cloth, also with products specific for stainless steel	Open	After cleaning, dry to prevent streaks
Wall-mounted panel	Soft cloth slightly moistened with water only	Open	Do not use detergents, solvents, or abrasives
Internal fans	Compressed air or soft brush	Open	Do not use detergents, solvents, or abrasives. Do not disassemble or open the product.

Technical data

- **Dimensions:** 57 cm x 38 cm x 7 cm
- **Weight:** 3.5 kg
- **Materials:** ABS, stainless steel, Forex
- **Power supply:** Power bank 5V, max 1A – USB-C (not included)
- **Insulation class:** III
- **Consumption:** 0.03 kWh per 8h
- **Noise level:** 38 dBA at 1 m
- **Maximum load:** 20 kg total
- **Support:** up to 15 hangers (max 20 kg weight)

In case of problems

- **Never attempt to disassemble the unit yourself.**

An improperly repaired unit may pose risks to the user.

- **Do not use the unit and contact customer service if:**

- the unit is visibly damaged;
- the unit emits a metallic noise;
- the unit does not start when the button is pressed.

Regulatory compliance

UPPY® is  marked in accordance with the EMC Directive

(European Directive 2014/30/EU) and complies with Regulation 2023/988.

Disposal

UPPY® is an electrical device and must be disposed of in compliance with the WEEE Directive (2012/19/EU).

Dispose of at authorized collection centers.

Fragrance capsule: Once the liquid is used up, dispose of the fragrance capsules with general waste (C/PET-PE90).

The packaging shows the correct disposal instructions.



Warranty

Legal warranty:

2 years for manufacturing defects.

Does not cover damage caused by improper use, wear, or incorrect installation.

Customer service and complaints



Email: assistenza@uppyhouse.com

www.uppyhouse.com

Don't worry be
uppy®

Your smart secret 😊



MADE IN ITALY

uppyhouse.com

