

ASSEMBLY INSTRUCTIONS

STEP1

STEP2

STEP3

STEP4

STEP5

STEP6

STEP7

AX4

BX2

CX1

DX1

EX1

FX1

GX1

IX1

JX4

KX12

LX12

MX2

NX2

OX2

PX1

QX1

hucifseim1.qvc-intern.de/im_it/prod/files/jpg/1772186490962_3_Tier_Trolley_Assembly_Instructions_-_JM.jpg

1/1